

PRODUCT SAFETY NOTICE – IMPORTANT UPDATE

COSATTO STRATFORD COT BED

In April 2010, we developed a safety enhancement device for a version of our **Stratford Cot Bed** made between 2005 and 2009. This took the form of a simple device fitted at home, improving the product's security when being used as a COT. If moved or lifted for any reason, we found it possible to create a gap between the lower and upper cot bed leg sections, with the possibility of injury to parent or child. It was also found possible that, in some cases, partial disassembly of the drop side mechanism could occur, rendering the cot unsafe.

If you already have the device supplied and fitted no further action is required.

If not and you still own a Cosatto Stratford Cot bed, in either **white** or **nut** finish, please check the Product Description Label as shown in the picture. Then check the Date Code Label to see if your cot bed is affected. You will find these labels on the mattress base slats.



[Product Description Label (white)]



[Date Code Label]



The **only** versions affected have Date Code Labels dated from **01/09/2005** to **18/03/2009** (inclusive) and were sold by high street retailers and outlets throughout the UK and Ireland.

If you are using your cot bed as a COT, stop using it immediately and make alternative safe sleeping arrangements for your baby and contact us with your details to receive the safety enhancement device.

If you have converted your cot bed into a JUNIOR BED, it is safe to continue using it, but you still need to request the safety enhancement device for future use as a COT.

Once you have carried out the above checks and you think you may have a Stratford Cot bed that is affected, please contact Cosatto immediately, via **0871 977 3888**, or via email at stratford@cosatto.com or simply write to the address printed below, marking your envelope "Stratford Cot bed".

We will send out, by return post and without charge, a component, an Allen key and fitting instructions to enable you to easily complete the safety enhancement.

See following page for the fitting instructions or [click here](#) to see the video guide.


We have taken this action to ensure the safety and wellbeing of our customers and apologise for any inconvenience this may cause.

Cosatto Ltd, Bentinck Street, Farnworth. Bolton, Lancashire BL4 7EP

COSATTO

BABY STUFF WITH PERSONALITY!


STRATFORD COT BED SAFETY ENHANCEMENT DEVICE FITTING INSTRUCTIONS

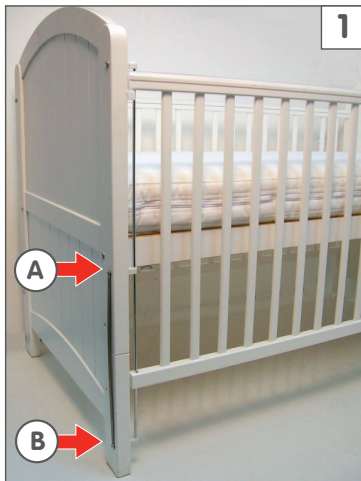

1 The metal strap supplied is easily secured to the outer face of the front left hand cot leg, as shown in photograph 1. Alternatively, it may be fitted to the inner face of the leg (see photograph 2), if preferred. This strap needs to be fitted between the middle and lower bolts holding the plastic fittings on the left hand side metal drop rod when used in **COT** mode.

Using the Allen key supplied, unscrew the middle bolt (A) from the plastic rod guide, and remove the bolt from the cot leg.

Place the bolt (A) through one of the holes in the end of the metal strap. Insert the bolt back through the cot leg and into the plastic rod guide. **Do not** fully tighten the bolt at this point.

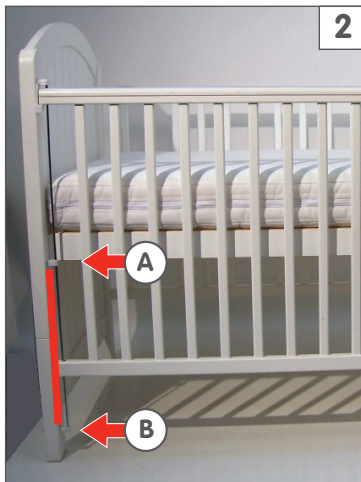

Unscrew the bottom bolt (B) from the plastic rod retainer, and remove the bolt from the cot leg.

Insert the bolt (B) into the lower hole in the metal strap and through the cot leg.

Secure the bolt (B) into the lower plastic rod retainer, ensuring the strap is held securely between both bolts.

Finally, tighten both bolts – finger tight. **Do not over tighten** as this will not make it any safer, and may damage the plastic parts. Photograph 3 shows the metal strap fitted correctly to the outer face.



If you experience any difficulties please contact Cosatto using the details below:

Tel: +44(0)871 977 3888
Email: stratford@cosatto.com

[Click here](#) to see the video guide

If you are currently using the cot bed in **JUNIOR BED** mode, please retain the device for future use in **COT** mode.